

SUBSYSTEM	CCTV	SMUTILE CCTV FAILURE MODE & EFFECTS ANALYSIS	PREPARED BY	J. Calvano
UNIT	CABLE		DATE	8-12-86
ASSY. OMNG.	22932BB		REVISED	2-17-87
QUANTITY	1			

FUNCTION: Provides power and commands from cargo bay bulkhead to cargo bay camera stack.
 supplies video from cargo bay camera stack to cargo bay bulkhead

ITEM	FAILURE MODE	FAILURE CAUSE	FAILURE EFFECT ON END ITEM	FAILURE DETECT FLIGHT/GROUND	CORRECT ACTION TIME AVAIL/REQ	CRIT'Y	INITIARDS/REMARKS
W 5.20	Loss of chassis GND	Open	video noisy. Worst Case: Loss of mission critical video.	Visual	None	2/2	
			Worst Case (if video is not mission critical, for B & C cameras only): Unable to verify PIB door aft bulkhead latches are closed.	Same as above	None. (Usage of EVA tools is available.)	3/18	

5A0210J
 ATTACHMENT 2 -
 Page 102 of 109